


SENSORE DI PRESSIONE  
BENZINA POSIZIONATO SUL  
RAIL BENZINA LATO  
GUIDATORE

CENTRALINA COMANDO  
POMPA BENZINA  
SITUATA SOTTO AL  
SEDILE POSTERIORE  
LATO PASSEGGERO

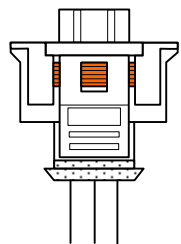


CONNETTORE DEL  
SENSORE DI PRESSIONE  
BENZINA 3 FILI



RIPROGRAMMARE CON  
LA CONFIGURAZIONE  
DEDICATA PER  
QUESTO VEICOLO  
PRESENTE SUL KIT TAP  
Codice AEB011N

PETROL PRESSURE  
PROGRAMMABLE EMULATOR

CONNETTORE DELLA  
POMPA A 6 FILI

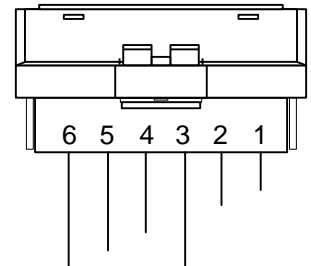

PIN 3 FILO GRIGIO SEGNALE  
SENSORE DI PRESSIONE BENZINA



ROSSO → +12V SOTTOCHIAVE

BLU → AL FILO BLU  
DELL'ELETTROVALVOLA GAS

NERO → MASSA


ROSA }  
ROSA/NERO } NON COLLEGARE

PIN 3 FILO BIANCO/MARRONE →  
SEGNALE PWM POMPA BENZINA

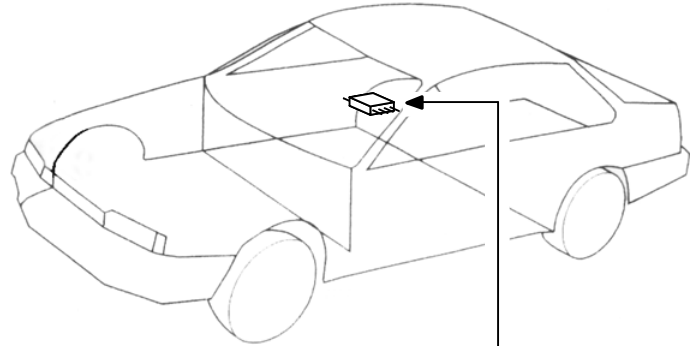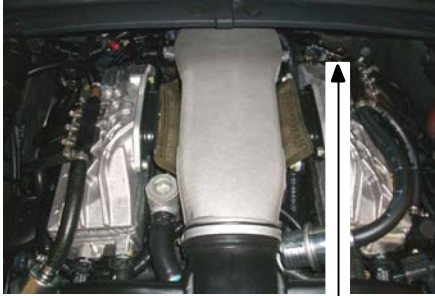

PETROL PRESSURE SENSOR  
ON THE PETROL RAIL LOCATED  
ON THE DRIVER SIDE

PETROL PUMP ECU LOCATED  
BELOW THE REAR SEAT  
PASSENGER SIDE

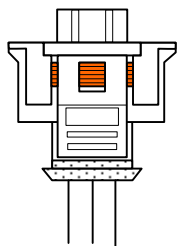


3 WIRES PETROL  
PRESSURE SENSOR  
CONNECTOR



TO REPROGRAM BY  
DEDICATED CONFIGURATION  
AVAILABLE IN THE KIT TAP  
Code AEB011N

PETROL PRESSURE  
PROGRAMMABLE EMULATOR

6 WIRES PETROL  
PUMP CONNECTOR

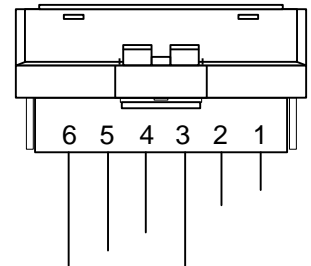

PIN 3 GRAY WIRE PETROL  
PRESSURE SIGNAL

RED → +12V KEY ON ENGINE OFF

BLUE → TO THE GAS VALVE BLUE WIRE

BLACK → GROUND

PINK  
PINK/BLACK  
DON'T CONNECT

PIN 3 WHITE/BROWN WIRE PWM →  
PETROL PUMP SIGNAL